


PARTS LIST

- 2x Front Plate
- 4x Small Back Plate
- 4x Large Back Plate
- 4x M4 x 40mm Hex Screw

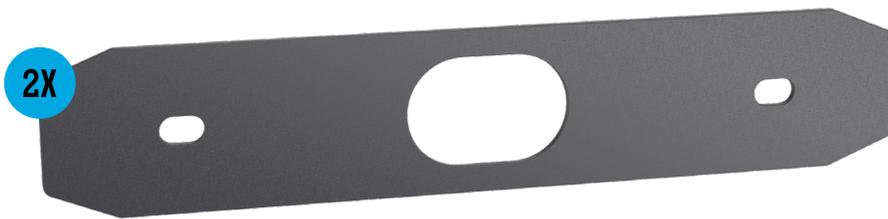

REQUIRED TOOLS

- M3 Hex Allen Wrench

TECH NOTES

- No cutting or drilling is required for front grille strobe light installation.
- Approximate install time: 20 minutes (not including harness installation)

SCAN FOR VIDEO
INSTRUCTIONS OR VISIT
[BUILT-BRIGHT.COM/INSTALL](https://www.built-bright.com/install)

STEP 1 – PLAN THE INSTALL



Unbox the grille brackets and lay out all of the components. Determine where you want to install the lights on the grille.

- There are 4 Small Back Plates and 4 Large Back Plates included in this kit. Choose the optimal back plate option according to the height of the grille opening you are installing the light into. In general, openings shorter than 1" use the Small Back Plates, while openings 1"-2" in height use the Large Back Plates.
- You only need 4 of either the Small or Large Back Plates and screws for the install.



STEP 2 – INSTALL THE GRILLE BRACKET + LIGHT

1. Couple the lights with the front plate. Align the two holes on the sides.
 2. Insert the screws through the light and the bracket holes.
 3. You can use the provided 3M tape to attach the lights to the bracket (optional).
 4. Mount the lights to the chosen location on the grille.
 5. Hold the back plate to the rear of the grille hole/slot.
 6. Tighten the screw with a hex wrench.
- Note: If the hole/slot of the grille is too small for your hand to reach behind, you can attach the back plate to the screw loosely beforehand. Insert the back plate horizontally through the hole/slot. Adjust the back plate vertically and then tighten the screws. **Do not overtighten.**

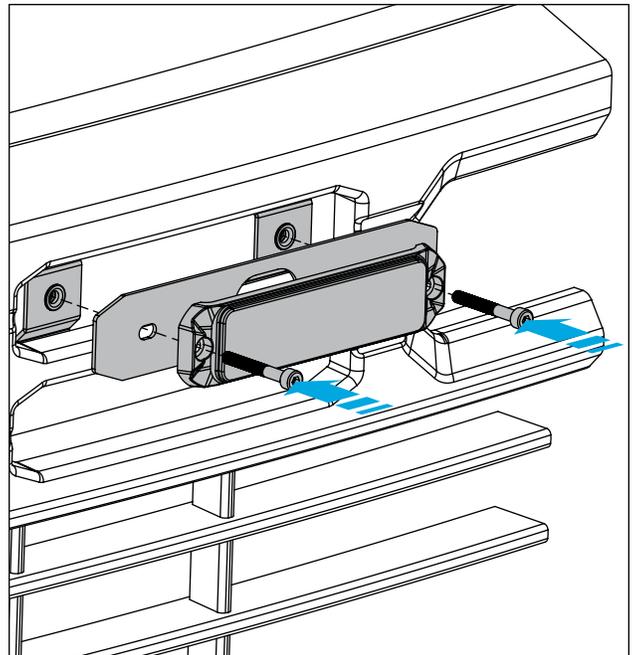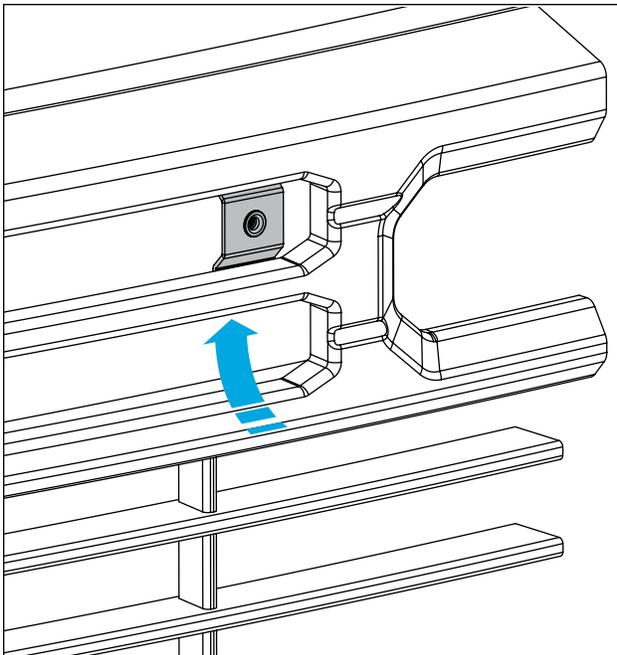

STROBELINK™

ALL-IN-ONE STROBE LIGHT KIT

BUILTBRIGHT

BASTROP, TEXAS 78602
UNITED STATES OF AMERICA
WWW.BUILT-BRIGHT.COM

